

## Post Sleeve INSTALLATION INSTRUCTIONS

A 4" x 4" Post Sleeve can be installed over a 4" x 4" nominal wooden insert consisting of pressure treated southern yellow pine or better. The wooden insert shall be attached to the support substrate utilizing two 1/2" diameter carriage bolts installed along the centerline of the post located at 1 3/4" and 5 3/4" from the top of the floor surface with a minimum distance of 1 3/4" from the lowest installed carriage bolt to the bottom of the post. (See Figure 1.) The support substrate shall be a minimum of 7 1/4" deep.

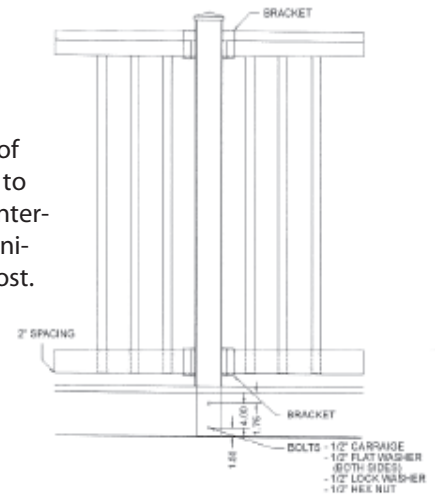


Figure 1\* - STANDARD POST SLEEVE WOOD INSERT INSTALLATION